

Technical Note

Inertia-Link[®] 3DM-GX2[®] Orientation Sensors



Wireless Base Station Usage

Overview

MicroStrain's Inertia-Link[®] and 3DM-GX2[®] 2.4 GHz wireless orientation sensors operate with MicroStrain's USB Base Station, Analog Base Station or Serial Base Station. This technical note contains details of usage pertinent to both the general user and the application developer.

Details

- Inertia-Link[®] version 1.2 software supports the USB Base Station and the Analog Base station only. It does not support operations using the Serial Base Station.
- Application developers wishing to use the Serial Base Station may do so without restriction.
- The Analog Base Station does not support analog operations with the Inertia-Link[®] and 3DM-GX2[®].